





## Software

	<p style="text-align: center;"><a href="#">TMI-WIN specification</a> <a href="#">Download TMI-WIN</a></p> <p>TMI-WIN allows for a configuration of a panel mounted current loop indicator TMI-20W.</p>
	<p style="text-align: center;"><a href="#">LMS-WIN - specification</a> <a href="#">Download LMS-WIN</a></p> <p>LMS-WIN allows for a configuration of older types of universal temperature transducers made by SSA:</p> <ul style="list-style-type: none"><li>• LMS-811,</li><li>• LMS-81U,</li><li>• SMS-811.</li></ul>
	<p style="text-align: center;"><a href="#">LXTconfig - specification</a> <a href="#">Download LXTconfig</a></p> <p>LXTconfig allows for a configuration of newer types of universal temperature transducers made by SSA:</p> <ul style="list-style-type: none"><li>• LXT-811-S,</li><li>• LXT-81U-S,</li><li>• SXT-811,</li><li>• SXT-81U</li></ul>
	<p style="text-align: center;"><a href="#">LXMconfig - specification</a> <a href="#">Download LXMconfig</a></p> <p>LXMconfig allows for a configuration of a weight transducer LXM-91U.</p>